


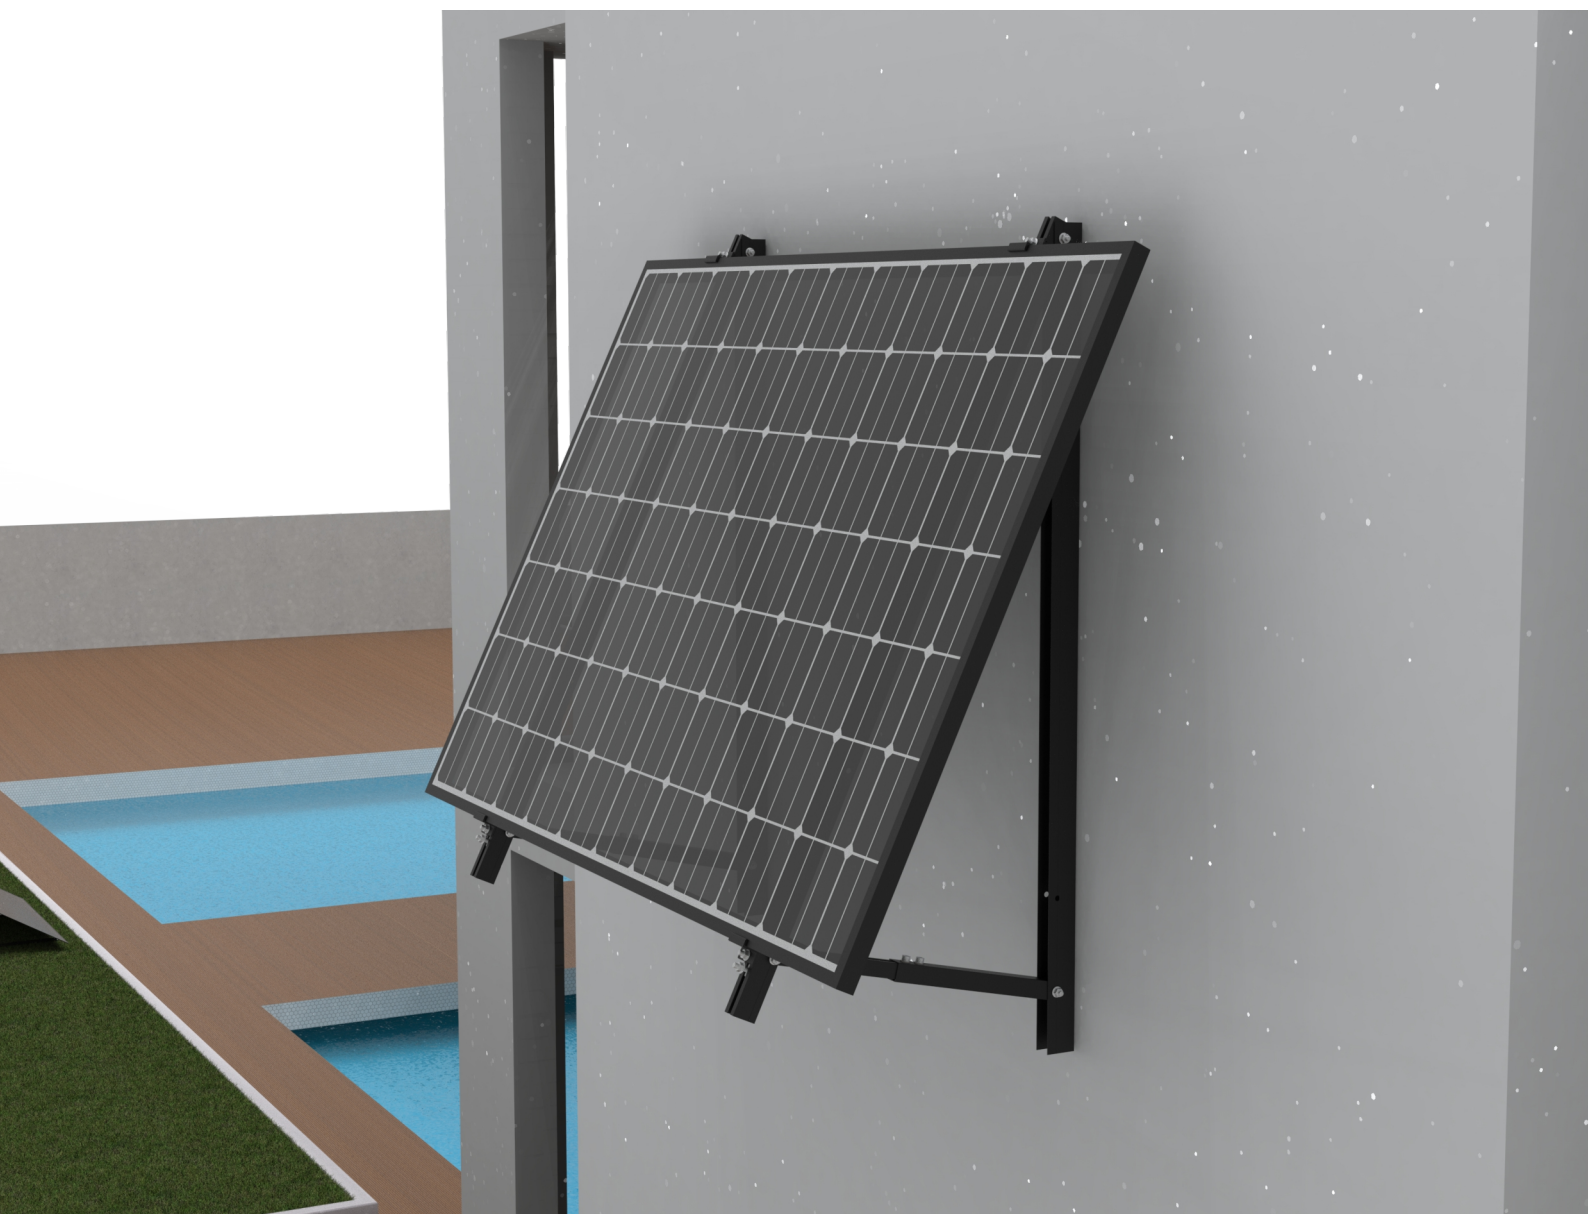

Balcony Mounting System Wall Installation

Powerway Renewable Energy Co.,Ltd

Add(Sanshui): No.11 , Area D , Leping Industrial Park ,
Sanshui , Foshan , Guangdong , China
Add(Chancheng): E-17 Floor, Foshan New & Hi-tech zone Technology Industrial Park,
No.13 HuaBaoNan Road, Chancheng , Foshan , Guangdong , China
Tel: +86 757 8259 6536
E-mail: info@pvpowerway.com
Web: www.pvpowerway.com

Czech Republic Subsidiary

Add: Revolucni 655/1, Star Msto, 110 00 Praha 1, Czech Republic IC: 195 23 963

Japan Office

Add: 151-0072 Hatagaya, Shibuya-ku, Tokyo 2-7-2 Hatagaya You Center Building 8F
Tel: +03 3373 1155

Philippines Office

Add: Unit 36-G San Lorenzo Tower, The Residences at Greenbelt
Esperanza Street, Legaspi Village, Makati City, Metro Manila, Philippines
Tel: +63 095 6685 0593

Malaysia Office:

Add: Atwater Residence Tower 2, Jalan Profesor Diraja, Ungku Aziz, Seksyen 13,
46200 Petaling Jaya, Selangor, Malaysia
Tel: 0060 1120786287

Chile Office:

Add: Calle La Gioconda 4300, Las Condes, Santiago, Chile

Taiwan Office:

Add: No. 38, Lane 37, Xingnan Road, Nanzi District, Kaohsiung, Taiwan



Section 1 – Instructions for protection

1 Warning

Section 2 – Introduction of the mounting system

2.1 Bill of Material

2.2 Tools of Material

2.3 Effect Drawing

Section 3 – Installation Procedures

3.1 Expansion Bolts Installation

3.2 The Main post and Sub post Installation

3.3 The Telescopic Rod Installation

3.4 Mounting System Installation on wall

3.5 The Module Installation

3.6 Torque of Bolts

Section 4 – Final assembly process

4.1 Tips for bolt installation

4.2 Check after installation

1. Warning

The balcony mounting system should be far away from flammable substances. The installer shall: Prevent fire near flammable or flammable goods.

When the fire has happened, you must first ensure the safety of the aluminum parts if allowed. The subsequent should be installed after inspection by a professional.

The parts of the system have been treated superficially, so damage must be avoided during installation and transport.

During installation, ensure the correct installation sequence, position and procedure, or the damage may have happened.

The connection of components should always be kept in good condition to avoid slipping and damage.

To prevent personal injury, the installer must take preventive measures before installation.

In order to prevent problems and accidents, assembly work must follow the instructions manual.










 


Do not install or operate the system if it is destroyed or contains too few components.

Installers should take care of their own safety during installation and troubleshooting and falling objects to avoid injury or bruising.


Ice, snow and dew on the surface of components should be removed before installation are disposed of on condition that their coatings are not destroyed.

The friction surface of the screws should be cleaned before installation. No dirt such as e.g. droplets, mud or greasy dirt.

2.1 Bill of Material

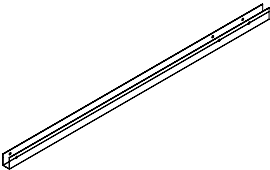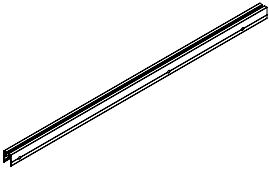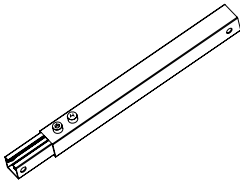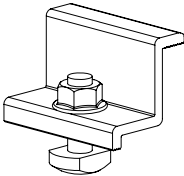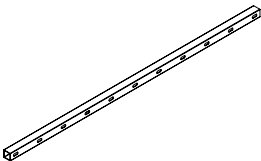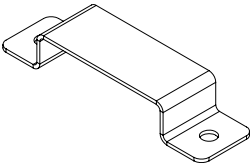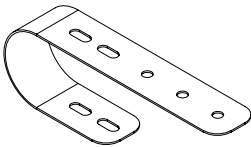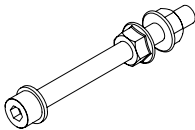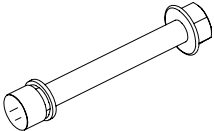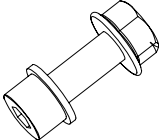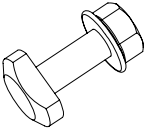
			
Main post×2	Sub post×2	Telescopic rod×2	Clamp×4
			
Cross arm×1 (Not use)	Hoop×2 (Not use)	Hook×2 (Not use)	Screw set 6×M8*90 (Not use)
			
Screw set 8×M8*50 (Use 6 × M8*50)	Casing pipe×2	Screw set 8×M8*20 (Use 4×M8*50)	Screw set 2×M8*25

2.2 Bill of Material (Not included in delivery)

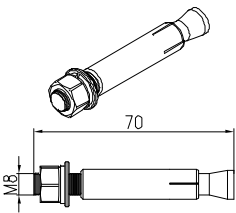			
Expansion Bolts 4× M8*70	Electric Drill	Drill(diameter 12)	Hammer


WARNING: The specifications of expansion bolts are the conventional recommended types. Users need to confirm whether the wall is suitable for fixing with expansion bolts and the load-bearing capacity meets the requirements of fixed photovoltaic systems.

2.2 Effect Drawing

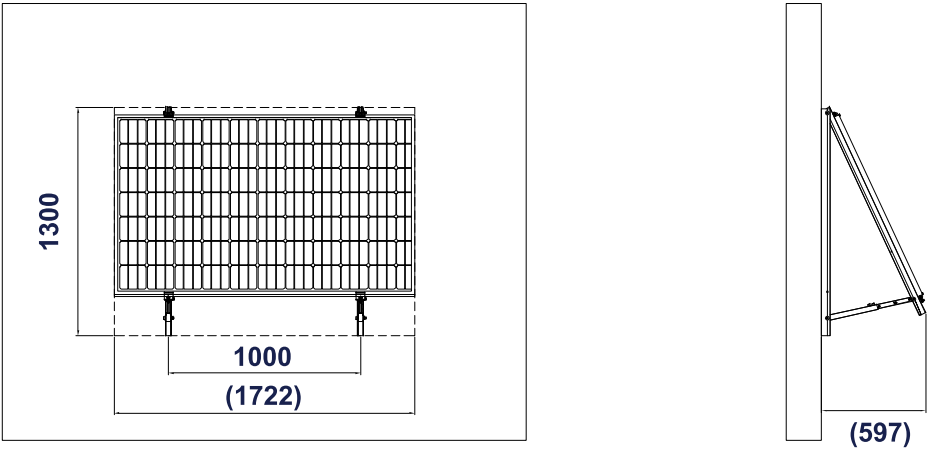


3.1 Expansion Bolts Installation

According to the location dimensions (800*1000) as shown below, use the Main post component of the bracket as an auxiliary positioning tool. Position and mark 4 holes on the wall. Select a 12mm diameter drill bit and use an electric drill to drill to a depth of 70mm (the same as the bolt length).

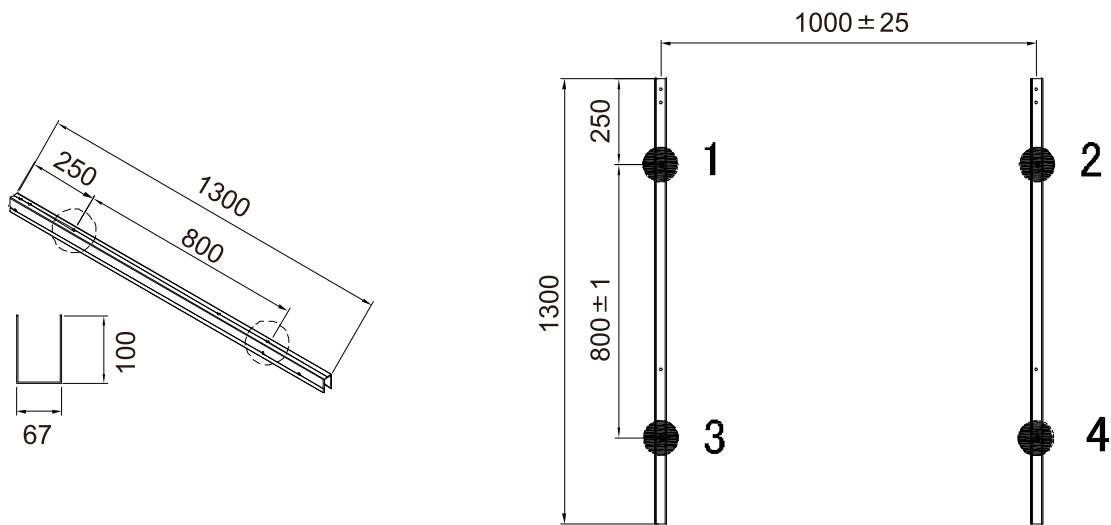


Place the expansion bolt set in the hole (do not unscrew the nut to prevent the bolt from falling into the hole and being unable to be removed due to drilling too deep), and hammer the expansion bolt to the depth as shown below.

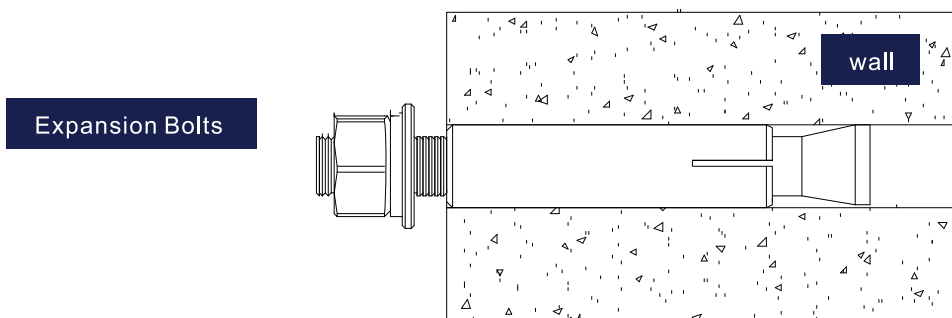

3.2 The Main post and Sub post Installation


At the connection between the main post and the sub post, use a set of M8 * 50 bolt through the casing pipe.

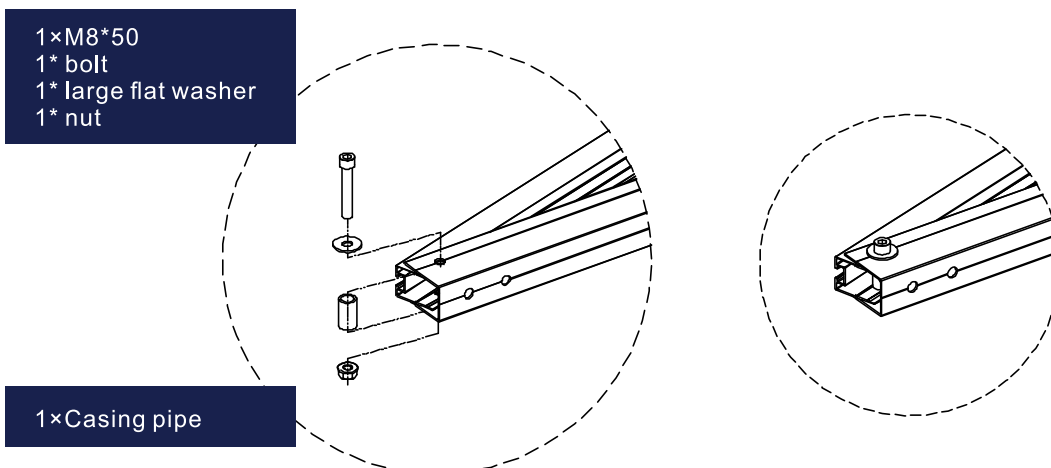


3.3 The Telescopic Rod Installation

The nut can slide in the guide rail to select the appropriate length to determine the angle of the rack


- 2×M8*20
- 1* bolt
- 1* flat washer
- 1* nut

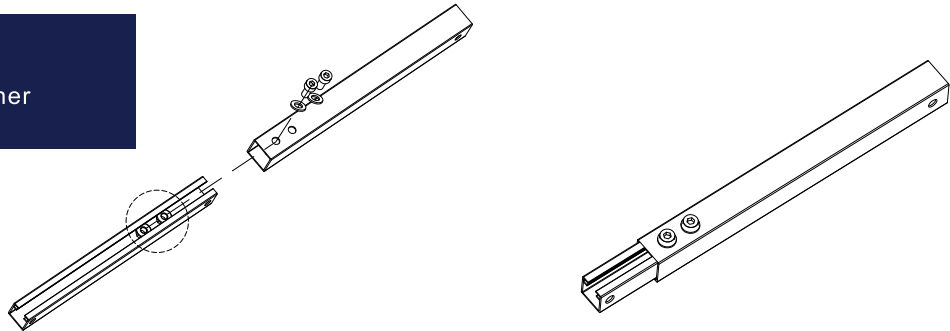


Install the telescopic rod on the main post and sub post with M8 * 50 bolt set

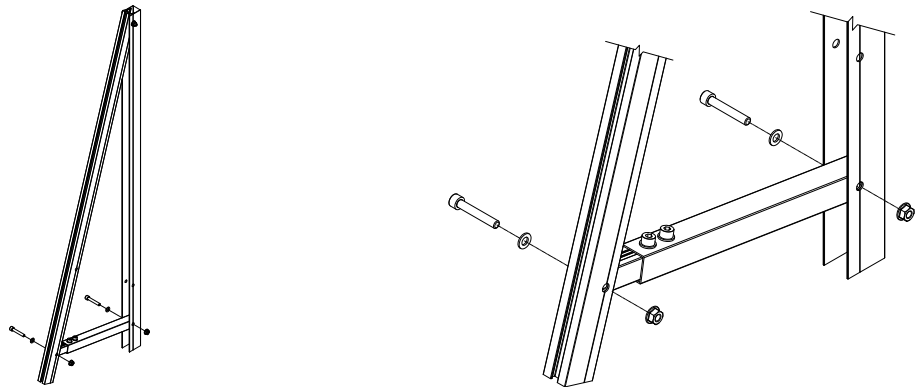


Mounting System Installation hole locations

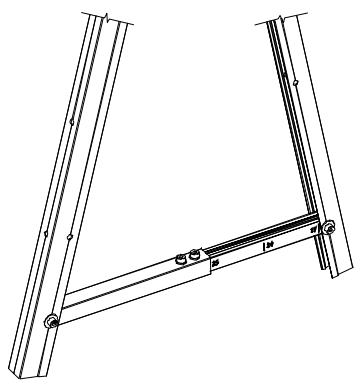

15° -25° hole locations (normal)

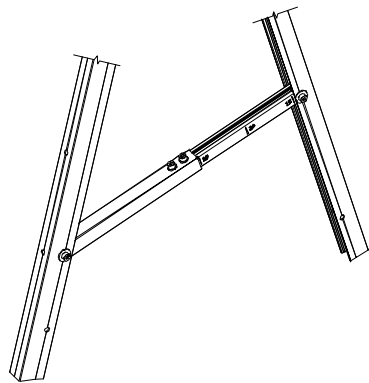


30° hole locations (optional)

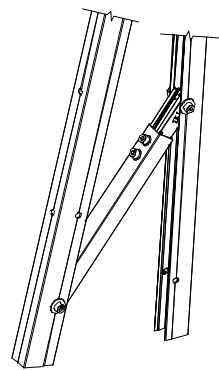


10° hole locations (optional)

3.4 Mounting System on wall Installation

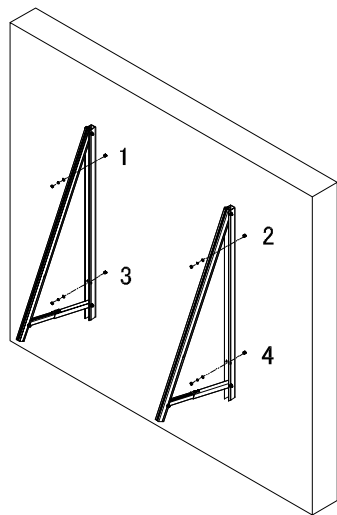


- Expansion Bolts
- 4× M8*70

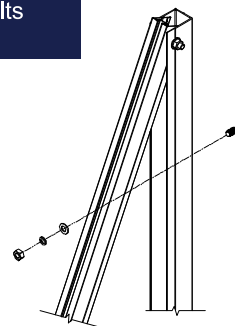

3.5 The Module Installation


- 1×M8*25
- 1* bolt
- 1* nut

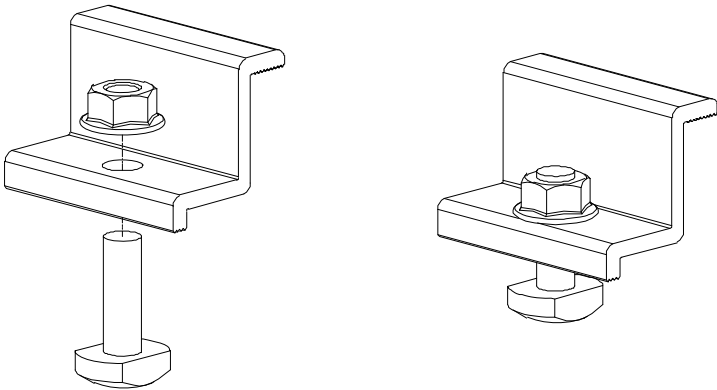


Install the clamp at the bottom of the sub post to prevent the module from sliding.
Install a group of bolts next to the lower side of the clamp to tighten the clamp to prevent slipping.

- 1× clamp
- 1* M8*25
- 1* bolt
- 1* nut

- 1×M8*25
- 1* bolt
- 1* nut

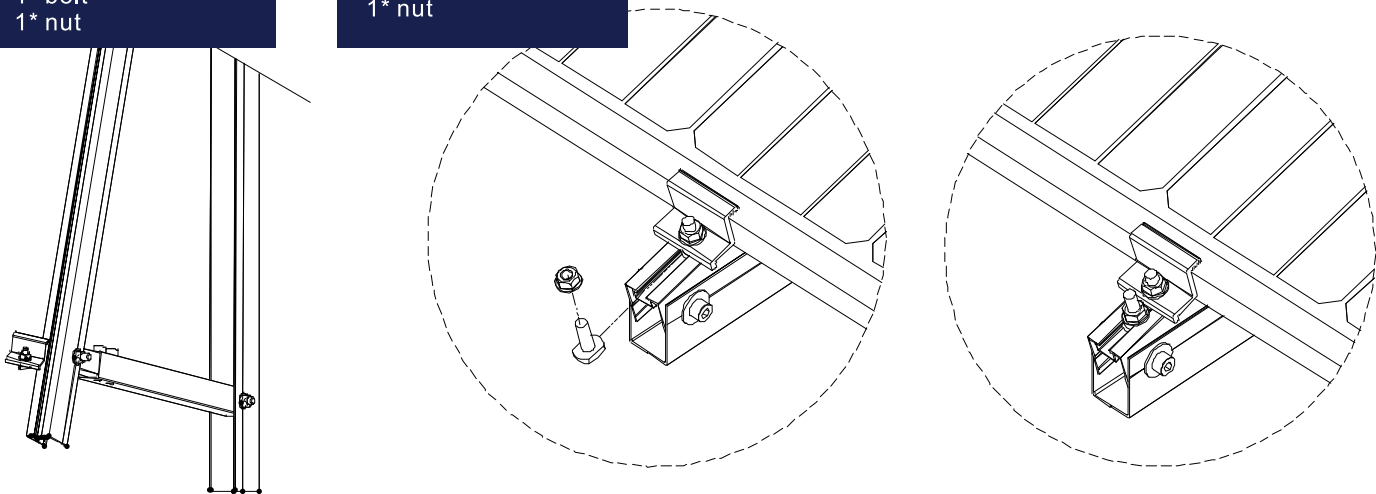

Place the module on the sub post, fix it around with clamp.
The post shall be uniformly arranged, and the position is shown in the below figure

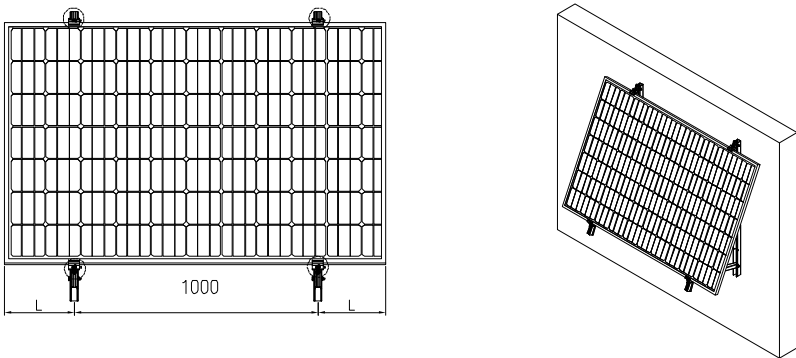

3.6 Torque of Bolts

Bolt	Torque(N*m)
M8*20	8-10
M8*25	8-10
M8*50	8-10
M8*90	8-10

4.1 Tips for bolt installation

Tips for bolt installation

*Precautions for technical installation dimensions.

The specific size of technical installation depends on the technical design drawings. This installation manual is only applicable to explain the installation method of the product.

* Precautions when installing stainless steel fasteners.

Reduce friction coefficient:

1. Ensure that the thread surface is clean (for example, free of sand and dirt);
2. It is recommended to apply water wax or add lubricant (e.g.butter, 40 # engine oil);

Correct operation method:

1. It must be tightened perpendicular to the thread axis Tendentious;
2. During tightening, the force must be uniform and tightened .The torque shall not exceed the specified safety torque value;
3. Use torque wrench or socket wrench as often as possible to avoid using adjustable wrench or electric wrench; If you use an electric wrench, try to slow down.
- 4.Avoid using at high temperatures, do not turn quickly when using.

4.1 Check after installation

Check after installation

It must check the condition of all components and parts after completion of assembly or fixed assembly:

- *Check for damage.
- *Check if anything is forgotten during assembly.
- *Check that all bolts are securely closed.
- *Check whether all assembled modules match.
- *Clean the construction site after assembly.

Warning: Before wiring, the structural condition of the installed system must be checked. Before construction of junction box and other electrical equipment to be installed .The fixing system must be confirmed by the technician.

Daily maintenance

In order to ensure the reliable operation of the PV support and improve the safety of the equipment, a daily registration and inspection system is established in the daily operation and maintenance work.

Daily inspection items list (example table)

Item	Content	Time	Result	
Clamp	Whether the clamps are loose		Checked exception	
			Check normal	
Connector	Whether the bolts are loose		Checked exception	
			Check normal	
Stand	Whether the stand components are deformed		Checked exception	
			Check normal	



(bolts are loose)

Warning: The mounting system is installed on the original building railing structure. In addition to the regular maintenance of the mounting structure, the user must also check and maintain the railing structure at the same time to ensure the safe operation of the whole system structure.